


Diagrams of transmission zones and interconnections used for the purpose of fixing annual QUFs

2009-10:

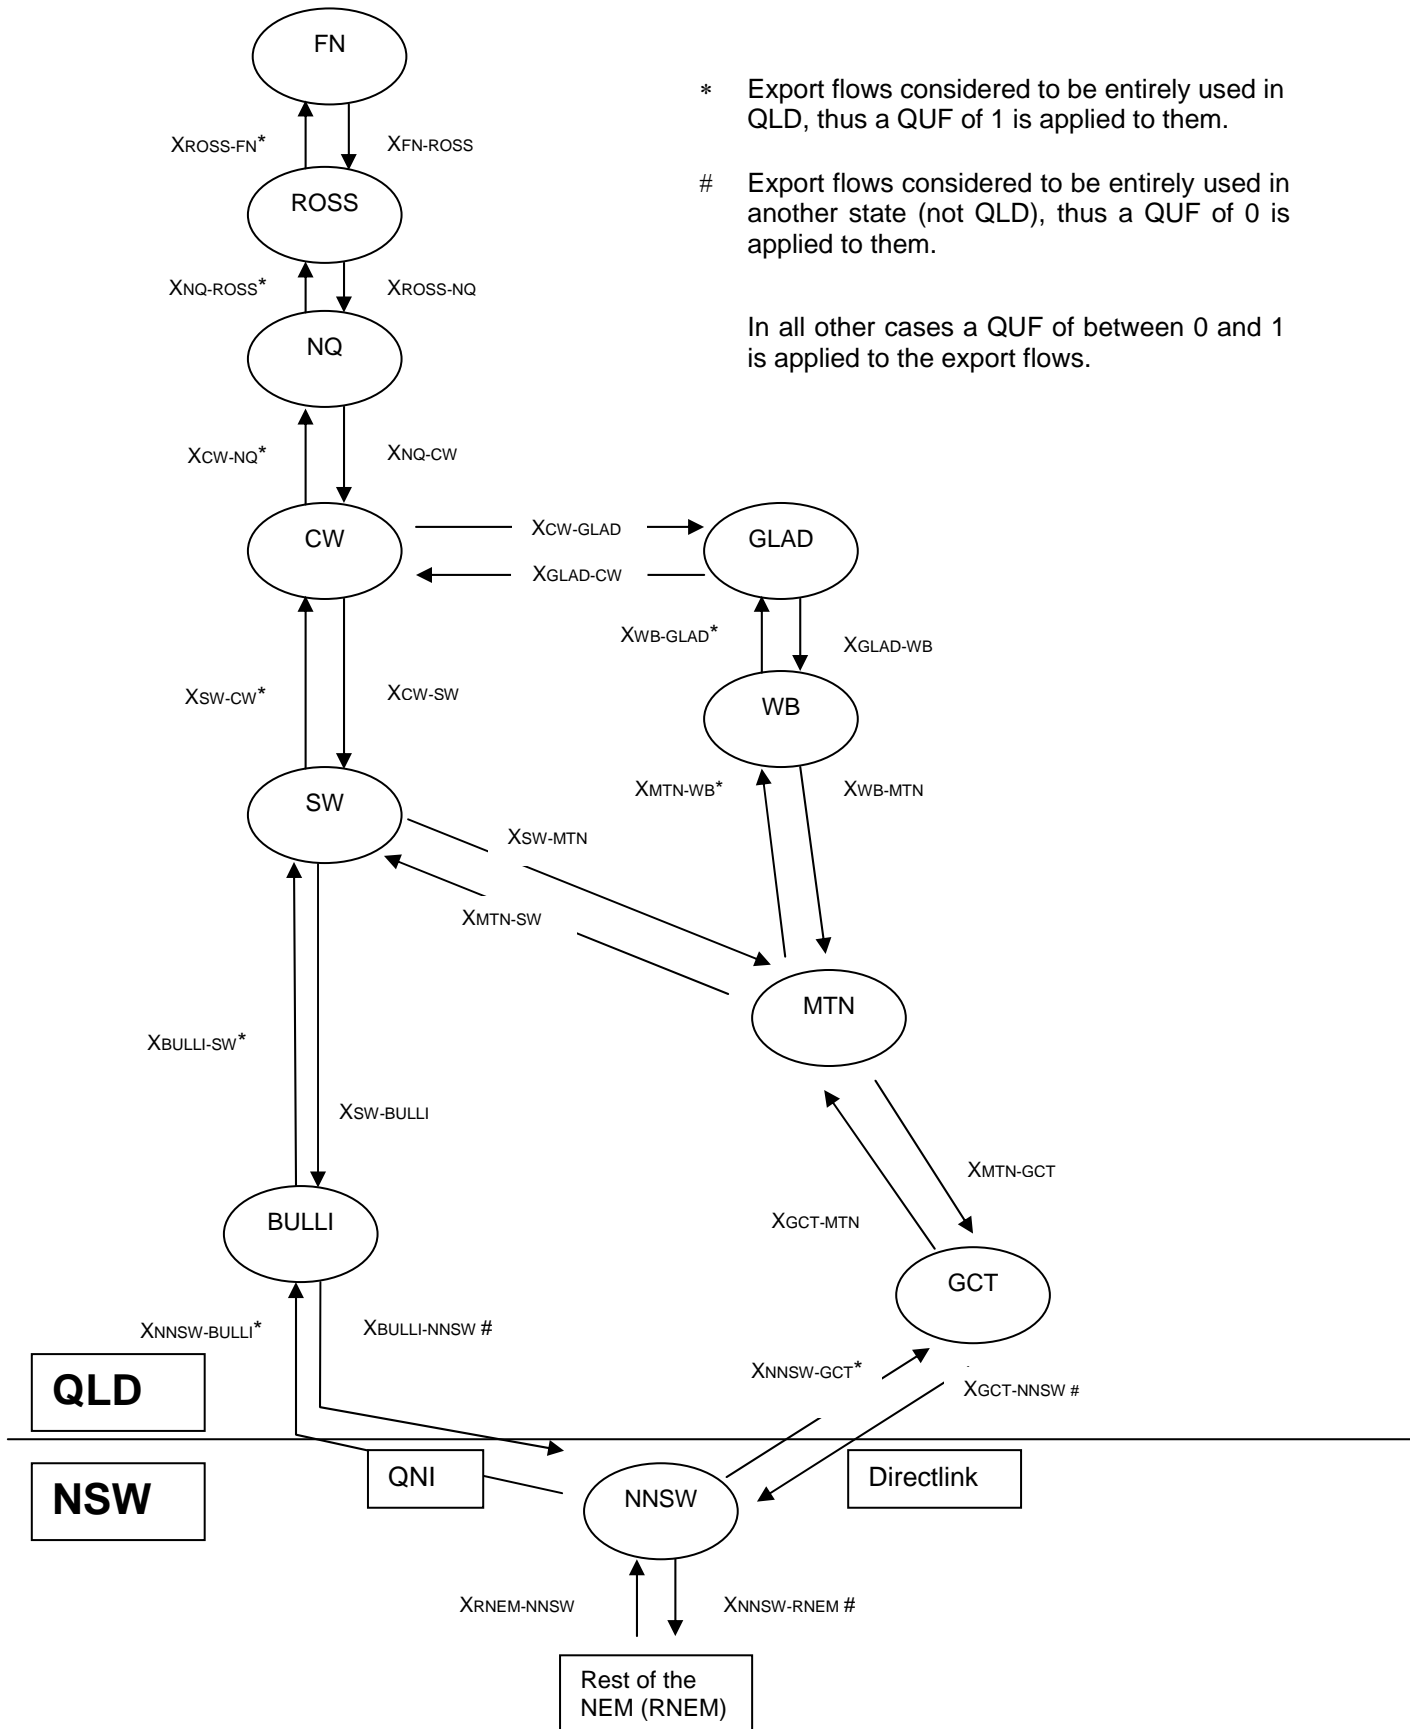


* Export flows considered to be entirely used in QLD, thus a QUF of 1 is applied to them.

Export flows considered to be entirely used in another state (not QLD), thus a QUF of 0 is applied to them.

In all other cases a QUF of between 0 and 1 is applied to the export flows.

2004-05 through 2008-09:

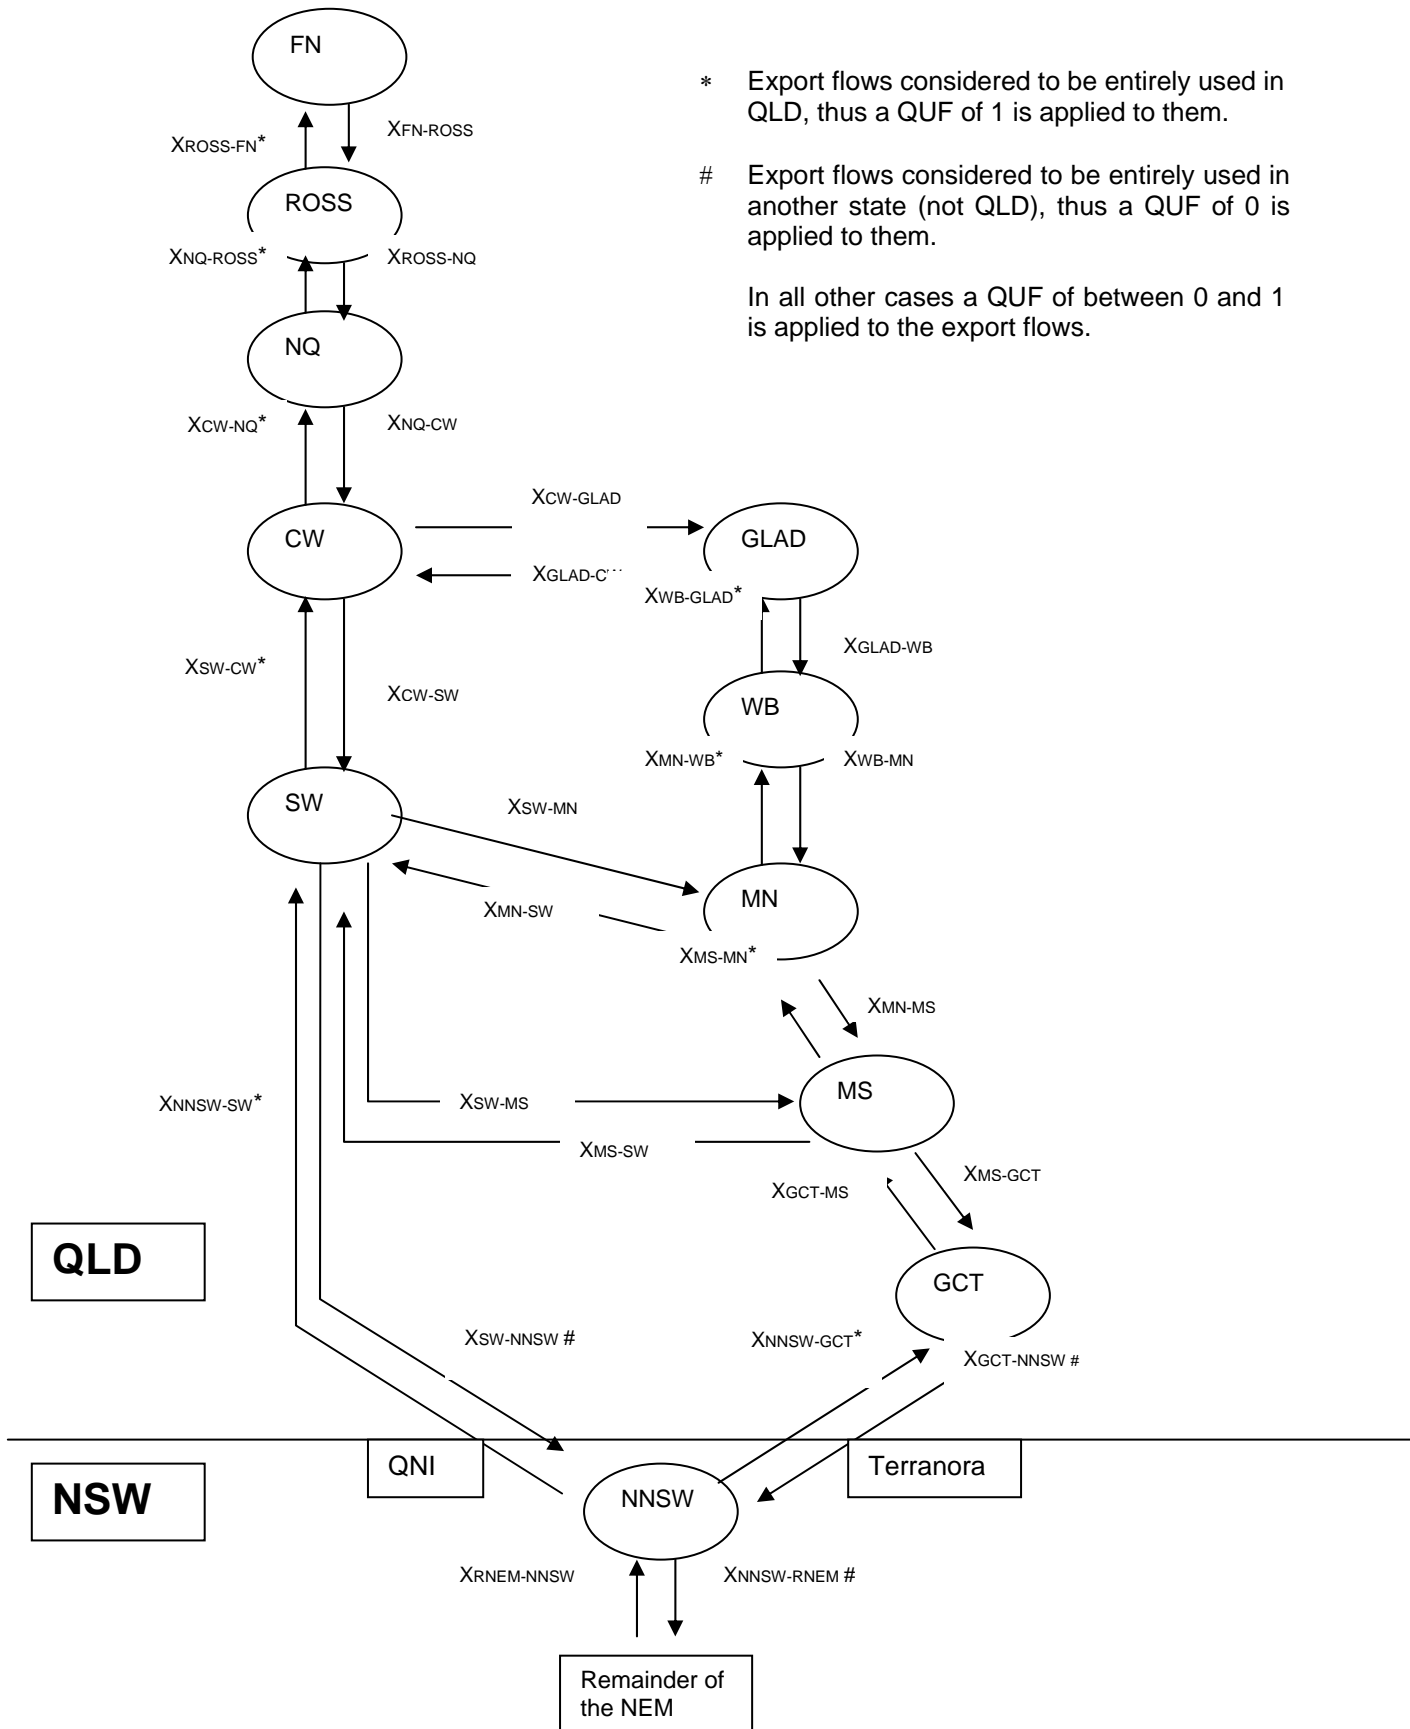

* Export flows considered to be entirely used in QLD, thus a QUF of 1 is applied to them.

Export flows considered to be entirely used in another state (not QLD), thus a QUF of 0 is applied to them.

In all other cases a QUF of between 0 and 1 is applied to the export flows.